

the blind alley

REPLACING HOOK AND SLEEVE ON LEVOLOR BLINDS

Attach the 5-shaped hook to the wand as shown below with the bottom of the 5 inserted into the hole in the top of the wand.



Then, slide the plastic wand connector sleeve back up the tilt gear stem and insert the top of the 5-shaped hook into the hole in the wand stem and slide the plastic connector sleeve down, locking the wand in place.



Be sure that you pull the wand connector sleeve all the way down so that it is positioned below the top of the 5-shaped hook, this will keep the sleeve from sliding up during use.

